
## CLINIC CLASSROOM AUDIO OVERRIDE PAGING SYSTEM

Paging Interrupts Classroom Audio

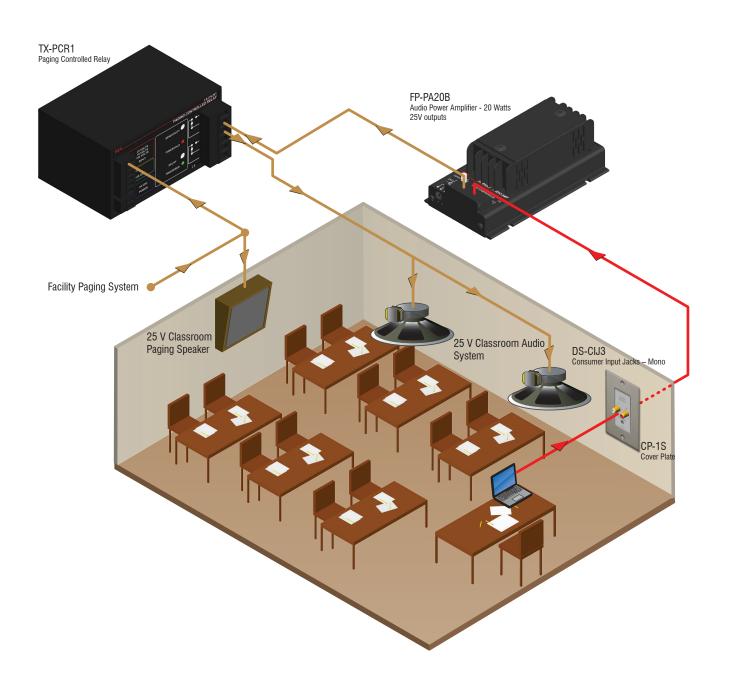



## Description:

This system uses a TX-PCR1 Paging Controlled Relay to interrupt classroom audio to allow a page to be heard clearly. Local classroom audio is fed through a wall plate to the 25 Volt amplifier. The 25 V speaker ouput is routed through normally closed contacts of the paging controlled relay to the classroom speakers. The paging controlled relay samples the 25 V audio to the classroom paging speaker. Whenever facility-wide paging is active the relay is energized and the classroom audio is interrupted. This allows the page to be heard without interference from the classroom audio. The wall plate used in this example is available in the normal RDL grey/white or in stainless steel with custom labeling available.



 Parts List

 Product
 QTY

 CP-1S
 1

 DS-CIJ3
 1

 FP-PA20B
 1

 TX-PCR1
 1

Recommended Pwr. Supplies
Product
QTY
PS-24AS 24 Vdc 500 mA
1
PS-24V3A 24 Vdc 3 A
1

